


Creating a Horizontal Wall Cabinet

1. Flip the cabinet over so that the door opens down.
2. On the door, measure in 1 1/8" and mark the back end of the bracket.
3. Holding up the hinge, measure up 5 1/4" (since the cabinet is upside down).
4. Screw in the hinges and flip the cabinet back over to ensure proper clearance.

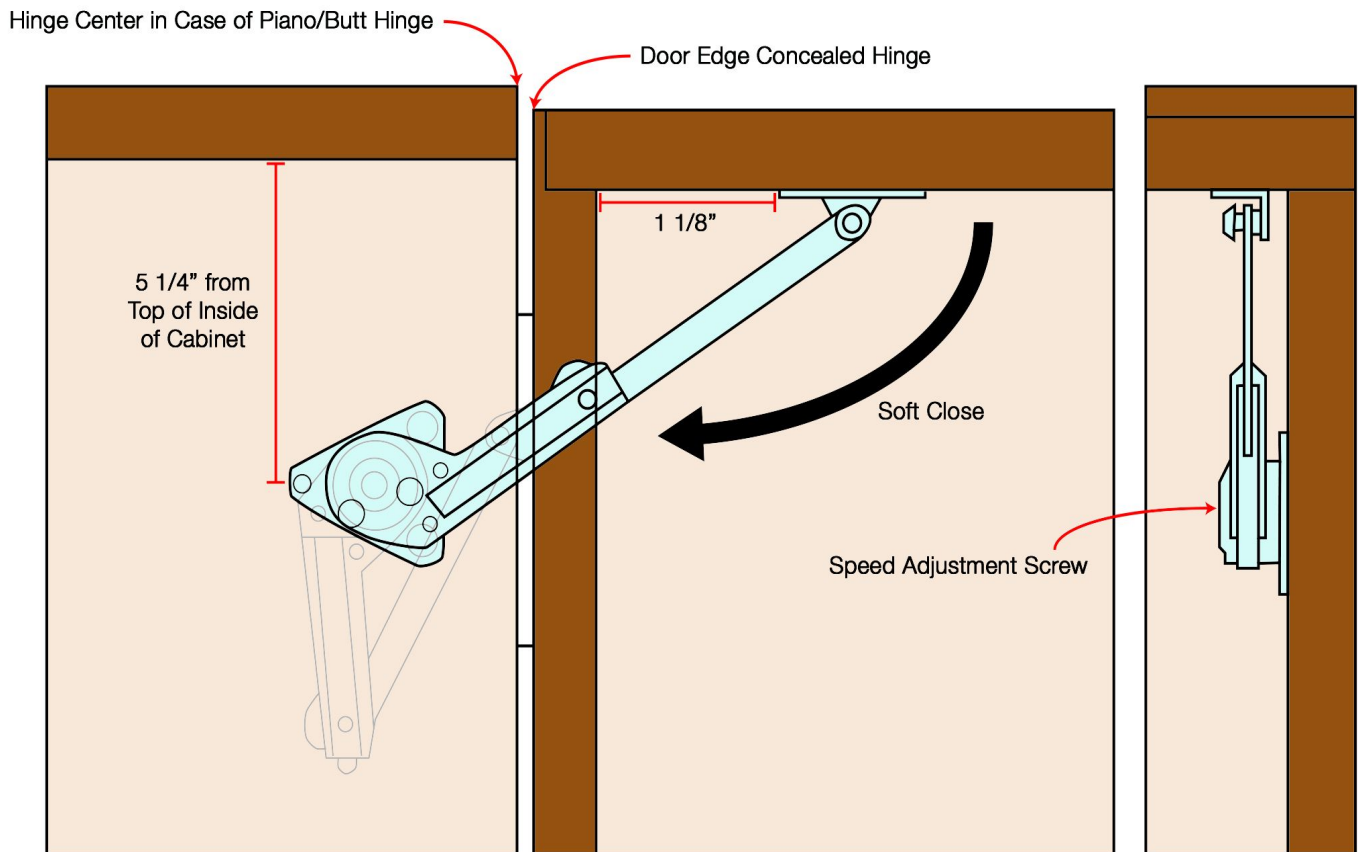

RTA